Instruction Maunal

Installation and noperation instruction

The electrical set, including a motor and foot controller, is a replacement for updating the electrics on all old models, for example Singer model 66, 99 & 201, with external motors & converting hand or treadle machines to electric.


Bracket

Installation (for reference only)

- 1. When a sewing machine lamp is used, make the connection as fellows,
 - a) Loosen the screw (a) and remove the lid on the motor housing.
 - b) Connect the ends of lamp wire to the terminals marked "L" and "ML".
 - c) Put on the lid and screw tightly.

2. Install the motor

- a) Set up the motor temporarily by fasten bolt.
- b) Install the belt.
- c) The belt should be neither too tight nor too loose.The tension of belt can be adjusted by the position of motor.
- d) Tighten the screws after the adjustment is finished.

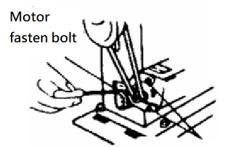


Motor lead wire

Bracket fasten screw

Motor

3. Connection

Please couple the foot controller connector(female) with the motor attachment
Cap(male) mounted on the sewing machine,
then plug in receptacle for power supply.

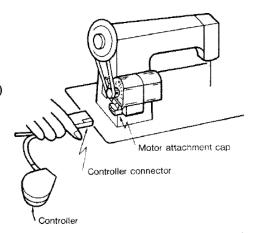

4. Operation

- a) Please switch on the sewing machine, if applicable.
- b) Please step on the foot controller peda.

The motor will begin to rotate.

Motor speed can be controlled by the pressure on the controller pedal.

